




RESIDENTIAL SINK APPLICATION


Installation Instructions

Secure sink drain protection with **easy 1-2-3** Installation

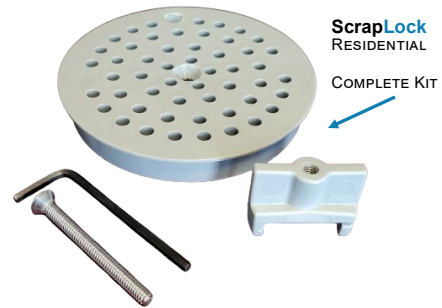


Step 1 - Place in the Space & Twist

ScrapLock | Residential uses a machined fitting as a base to lock into with an 8-32" flat head screw. Step 1 begins by placing the fitting into opposing openings in the drain outlet. The "feet" go into the open spaces & then below the center circle with the oval in the middle. Twist clockwise to secure.

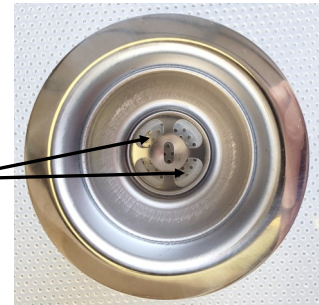



Step 2 - Center Bolt & Start the Thread

Once the ScrapLock fitting is secured as a base, place the drain strainer guard into the top side of the sink drain flange. Then insert the 8-32" threaded flat head screw into the center guard hole. With fingers, start twisting the screw until it begins to thread the screw into the base.

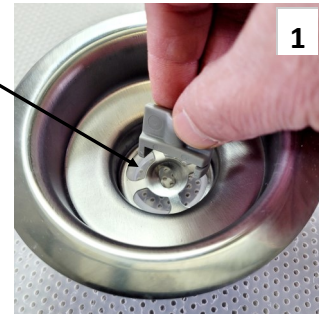

Step 3 - Tighten Screw with L-Key Hex Tool

Use the TOOL to tighten down the screw until the top head is recessed into guard. Only tighten with tool until snug and be sure not to over tighten. Once the screw is snug the installation is complete. The ScrapLock Residential is ready to strain & retain solids while cleaner water flows by.

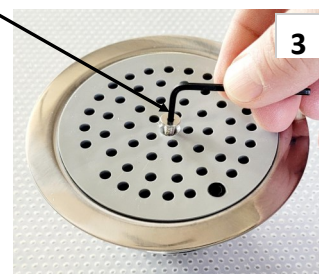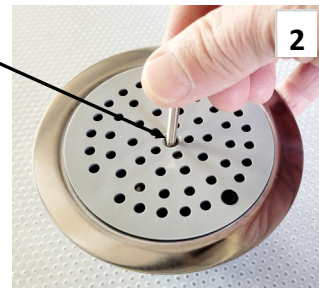

ScrapLock™ ... A BETTER WAY FOR TODAY.



© 2023 All rights reserved. Ecotek LLC

888.855.1925 | info@earthbio.com | www.earthbio.com